

Installation Instructions

IP1648 PoE Inserter

NITEK®

5410 Newport Drive, Suite 24
 Rolling Meadows, IL 60008
 PHONE (847) 259-8900
 FAX (847) 259-1300
 WWW.NITEK.NET

Note: This installation should be made by a qualified service person and conform with local codes.



Reduce risk of fire or electrical shock do not expose this product to rain or moisture.


WARNING

CAUTION: To reduce the risk of electric shock do not remove cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Specifications

Size	1.75" H x 19.0" W x 8.6" D
Power Requirements	100 – 240 VAC
Output Voltage	IEEE802.3af compliant PoE
Output Power	15.4 Watts per channel
Enclosure Type	Standard 19" rack, 1RU in height

IP1648 Dimensional Diagram

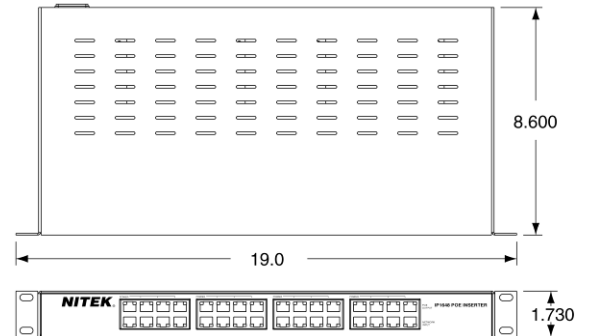

Installation

- 1) Connect a 10/100 network switch to any lower row of RJ45 ports.
- 2) Connect a standard PoE camera or other device to the port directly above the 10/100 connection.
- 3) The IP1648 will automatically detect PoE devices and switch on the power to the PoE device. When power is present for the PoE device the power LED for that port will be lit.

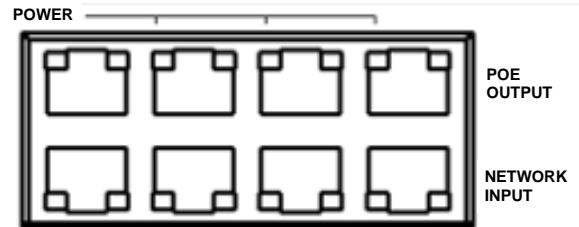


Figure 1 Port Details

IP1648 common hookup diagram

